 


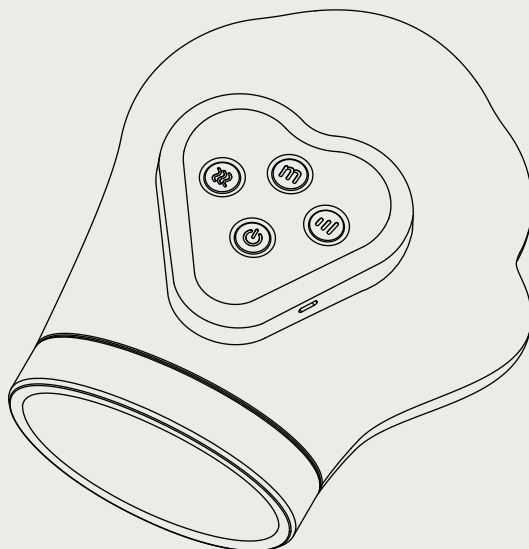

Smart Electric Hand Massager

User Manual

Customer Service:
Email: support@cotsoco.us
Tel.1: +1 6264203418 (U.S.)
Mon.- Fri. 9:00-17:00(PST)
Tel.2: +1 6264203417 (U.S.)
Mon.- Fri. 17:00-24:00(PST)

148 s 8th ave city of industry CA91746

Thank you for purchasing this hand massager. This product is a portable hand massager that combines air pressure massage and heat therapy. It is suitable for hand massage during office breaks or at home. Please read this instruction manual carefully before using the product and keep it safe.

Warning

The following groups should use with caution.

If you are receiving treatment at a medical facility or are in any of the following conditions, please consult with your doctor or physical therapist before using this product.

- Patients with malignant tumors
- Patients with heart disease
- Patients with skin injuries
- Patients with physical weakness
- Patients with tenosynovitis
- Patients receiving treatment at other medical institutions
- Patients requiring rest
- Persons who have lost the sense of temperature
- Women in the unstable early stages of pregnancy or shortly after childbirth
- Patients with osteoporosis, sprains, muscle strains, or other acute pain.
- Patients with implanted medical electronic devices such as pacemakers that are susceptible to interference.
- Patients with severe peripheral circulatory neuropathy or sensory disturbances caused by diabetes, etc.
- People with a body temperature exceeding 38°C, such as those with severe acute inflammatory symptoms (fatigue, chills, blood pressure fluctuations, etc.).

The following groups/situations are prohibited from using this product.

- This product is contraindicated for individuals whose exercise or stretching activities are advised against by doctors, including those with thrombosis, severe aneurysms, acute venous aneurysms, various types of dermatitis, and various skin infections, as these conditions may worsen.
- This product is also contraindicated for individuals unable to express their will or operate the machine themselves.
- This product is not suitable for children under 6 years of age. Children aged 6-14 should use this product under the guidance of an adult guardian.
- If you have had bone setting or surgery on your hand, you should use this product under the guidance of a doctor.
- Do not use when you are severely fatigued.
- Do not use within one hour before or after meals.
- Do not use after drinking alcohol.


Precautions for Use

- Do not use for purposes other than massage.
- Do not use simultaneously with other therapeutic devices.
- Do not allow young children to use or play with this product.
- Do not use while sleeping.
- Do not use if you are unable to express yourself or your body is unable to move independently.
- This product is for single-handed use only; do not use with both hands.
- Do not wear jewelry, nail art decorations, or other hard objects around the massage area.
- It is recommended to use this product after washing your hands. If you wish to use it in conjunction with hand care, it is recommended to wear gloves.
- The device has a heating surface; do not use if you are not sensitive to heat.
- The default single-use time is 15 minutes. To use it again, you must restart the device. Do not exceed 30 minutes for a single massage to avoid over-massage.

Precautions for Use

- Do not use while covered with blankets or other bedding.
- Do not use when it feels excessively hot.
- Do not use near heating equipment such as heaters.
- Do not use in humid environments such as bathrooms. Also, do not allow water or other liquids to come into contact with the product.
- May cause low-temperature burns. Regarding "low-temperature burns," even at relatively low temperatures (40℃~50℃), prolonged contact with the same area of skin can still cause burns without the user feeling heat or pain.

Parts Name

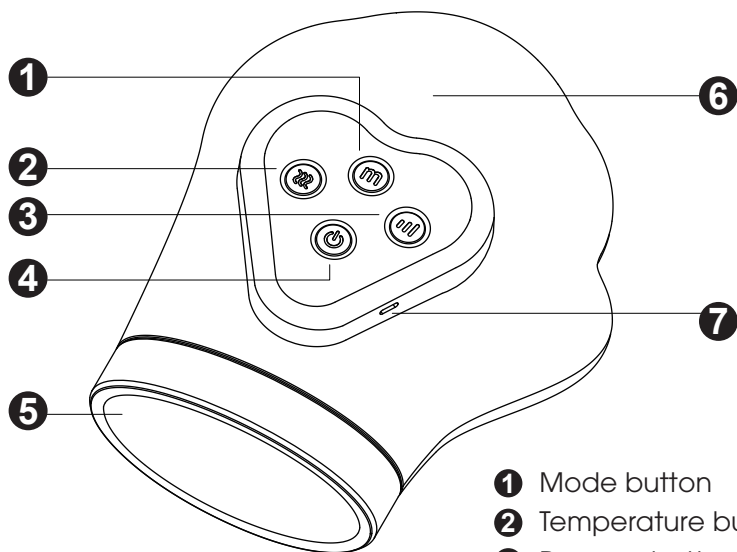

- ❶ Mode button
- ❷ Temperature button
- ❸ Pressure button
- ❹ Power button
- ❺ Inner liner
- ❻ The main part
- ❼ Charging port

Instructions for use

Power Button

Long press and hold the power button  for 1.5 seconds to turn on the device. It will enter the Vibrant Mode by default. Long press and hold the power button  again to turn off the device.

Mode Button

Short press the mode button  to switch modes. The mode switching order is: (Vibrant Mode) - (Soothing Mode) - (Strong Mode). Vibrant Mode is the default mode when the device is turned on.

Vibrant Mode

Indicated by a yellow light, this mode focuses on massaging the fingers and palms to activate oxygen in the blood, promote blood circulation, relax muscles throughout the body, and relieve fatigue. At the same time, the palms can be used to knead, and the backs of the hands and wrists can be pressed to further enhance the vitality of the hands and relieve fatigue, stiffness and soreness in daily work and life.

Soothing Mode

Green light indicates activation. Focuses on massaging the palms and wrists, effectively promoting facial blood circulation, relieving fatigue, invigorating the spirit, refreshing the mind, and effectively alleviating tension. Combined with a progressive wave-like dynamic kneading technique, it gradually massages the meridians, relieving soreness and fatigue in the hands.

Strong Mode

Indicated by a red light, focusing on massaging the fingers, palms, and chest area. Deeply clears and unblocks the meridians in the hands, effectively relieving hand fatigue and soothing discomfort such as tenosynovitis and wrist joint pain.

Intensity Button

Short press the intensity button  to switch between intensity levels. The switching order is:

(Low Intensity) - (Medium Intensity) - (High Intensity)

(Low Intensity): Yellow light keeps on.

(Medium Intensity): Green light keeps on.

(High Intensity): Red light keeps on.


Temperature Button

Short press the switch between low/medium/high/on/off hot compress.

Long press the temperature button for 2 seconds to turn on /OFF the prompt tone and .

Charging instructions

1. Connect the USB charging cable to the product's charging port.
2. When the battery level drops below 10%, the power indicator light will flash red as a low battery warning, and the device will automatically shut down after 3 seconds.
3. The product's default working time is 15 minutes. It needs to be restarted before use.
4. The product cannot be powered on or used while charging.
5. The indicator light ring will display a breathing light status during charging, and the indicator light ring will turn solid green when fully charged.
6. Supports multiple charging methods: computer USB port/power bank /5V=1A power adapter.

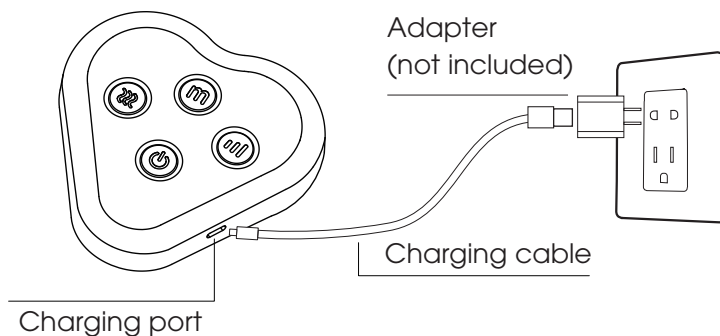

Indicator light description

When the machine is in use, the indicator lights display different colors to show the current battery level:

Power Indicator Light	Status	Description
Red Light	Flashing	$0 < \text{Current Battery Level} \leq 9\%$
Yellow Light	Always-on	$10\% \leq \text{Current Battery Level} \leq 50\%$
Green Light	Always-on	$51\% \leq \text{Current Battery Level} < 100\%$

When the device is charging, the indicator light displays different colors to show the current battery level:

Power Indicator Light	Status	Description
Red Light	Breathing light	$0 < \text{Current Battery Level} \leq 9\%$
Yellow Light	Breathing light	$10\% \leq \text{Current Battery Level} \leq 50\%$
Green Light	Breathing light	$51\% \leq \text{Current Battery Level} < 100\%$
Green Light	Always-on	100%

Maintenance Precautions

- Always turn off the machine before cleaning.
- Please dispose of the product packaging properly, keeping it away from infants and young children.
- This product contains a lithium battery. Do not disassemble, modify, immerse the product in water, or throw it into fire, as this may damage the product.
- Keep out of reach of children and infants. Furthermore, do not allow them to touch or operate this product, as this may cause burns or personal injury.
- When maintaining the product, do not use volatile oils, thinners, strong alkaline detergents, bleach, etc. for cleaning.

Maintenance and Care

When the machine is in use, the indicator lights display different colors to show the current battery level:

Cleaning Method

1. Surface dirt can be removed with a clean cloth. For deeper dirt, use a cloth dampened with neutral detergent to gently wipe away the dirt.
2. Do not allow water to enter the product; allow it to air dry naturally.
3. If the product is not used for an extended period, please charge it once a month.
4. When performing maintenance, always unplug the charging cable, but do not unplug the power cord with wet hands.
5. After use, do not place the product in direct sunlight or in a humid environment. If not used for a long time, after removing dirt, place it in a storage bag to prevent dust accumulation.

Waste Disposal Instructions

The lithium-ion batteries used in this product are valuable recyclable resources. Please remove the lithium-ion batteries upon completion of use and hand them over to a professional organization specializing in rechargeable battery recycling.

Battery Removal Steps:

1. Loosen the bottom screws.
2. Loosen the swivel screws on the circuit board and remove the circuit board.
3. Disconnect the battery leads.
4. Users must not replace the battery themselves.
5. The battery must be removed from the product before disposal.
6. The product must be powered off when removing the battery.
7. The battery should be disposed of safely.

Fault Diagnosis

This chapter lists the most frequently asked questions about this product. If you cannot find the answer to your question here, please contact our customer service.

Fault Description	Possible Causes	Troubleshooting Methods
Unable to power on	The Power button not long pressed and held	Long press and hold the power button  for 1.5 seconds
	Battery low	Charge the product
	Set time expired	Restart the product
Unable to charge	The charger is not plugged in properly	Plug in the charger properly
	Original charging cable not used	Replace with the charging cable that comes with the product.
If the device has not been used for an extended period, be sure to confirm that it is functioning correctly before using it again.		
Regular inspection	Does it have the following faults?	If the above malfunction occurs, please stop using the device immediately and disconnect the power supply to prevent accidents.
	•Whether the charger or plug is getting hot when charging. •Whether the charging cable has deep scratches or is deformed, or has a burnt smell when charging. •Whether there are any unusual sounds or vibrations during operation.Whether it does not work properly after the switch is turned on. •Whether there are other abnormalities or malfunctions	

Note: If the fault cannot be resolved or the product still cannot be operated after troubleshooting, please contact after-sales service personnel. Do not disassemble or attempt repair yourself.

Main technical parameters

Product Name	Hand Massager
Operating Voltage	3.7V=
Operating Power	6W
Charging Voltage	5V=
Charging Current	1A
Battery Capacity	2500mAh
Product Dimensions	199*241*109mm
Product Net Weight	About 695 g
Charging Interface Type	Type-c

Packing List

- Hand Massager X1
- TYPE-C Charging Cable X1
- Quick Start Instructions X1
- Storage Bag X1
- Instruction Manual X1

